




**Setup Video 7
How to use Holiday Mode**

1

HOLIDAY MODE



Holiday Mode is ideal for when the home is empty for an extended period.



2

When **HOLIDAY MODE** is active the system is held at the **FROST LEVEL** temperature setting, for a set number of days defined by the user.




3

To set Holiday Mode firstly wake up the stat by tapping any button.




4

Press **<** or **>** to select the **HOLIDAY MODE** icon.



The clock will now be replaced with the Holiday Mode timer.



5


When **HOLIDAY MODE** is selected the **FROST LEVEL** icon will also be highlighted.




6

Press **^** or **v** to set the intended number of days for **HOLIDAY MODE** to be active.

Then press **✓**





Setup Video 7 How to use Holiday Mode

7

Here the user has set Holiday Mode to last for 7 days.

The Holiday Mode Indicator will proceed to count down the remaining days of the mode setting.





8

When the Holiday Mode period has ended the system will automatically revert back to its original program settings.




9

To add or deduct days whilst holiday mode is active

Press  or  until the desired number of days are showing




10

Then press 



11

To end Holiday mode at any time simply

Press  to select the AUTO MODE icon. This will put the system back to its original program settings.

