





**Setup Video 6
Prog. Heating Schedule Part 2**

1


If a **COMPLETE 7 DAY** setup is preferred:

After the program (Pr 09) screen at the start of the heating schedule setup


Press  to select the **COMPLETE 7 DAY** option



2


then press **CONFIRM** 

Input the schedule required for the 7 days in the same way as previously demonstrated.




3

After the last period is programmed

press **CONFIRM** 

The system will return to **AUTO MODE** and the **COMPLETE 7 DAY** schedule will be active.



4


The 3rd Heating Schedule option is the **INDIVIDUAL** program.

If this is the preferred schedule type then input the schedule required for each individual day.




5

Once the final period has been entered for **Day 7** then

press **CONFIRM** 

The system will return to **AUTO MODE** and the **INDIVIDUAL** schedule will be active.



6

When the heating schedule is running in **AUTO MODE** and the user wishes to temporarily adjust the temperature, this can be done by using **MANUAL OVERRIDE**









**Setup Video 6
Prog. Heating Schedule Part 2**

7

To manually override the temperature whilst a heating mode is active simply

Press  or  until the temperature is at the desired level

then press  **CONFIRM**



8

The system is now running in **MANUAL OVERRIDE**.

When the system is set to Manual Override the hand symbol will appear next to the temperature indicator.



MANUAL OVERRIDE



9

If the user increases the set temperature above that of the room, the **HEAT INDICATOR** will appear.




HEAT INDICATOR




10

This symbol indicates the system is calling for heat.

Whenever the system is heating up this symbol will appear on the display.



HEAT INDICATOR



11

Manual Override will last until the next period is due to run.

When the next period becomes active the system will revert back to Auto Mode.



12

The hand symbol will not be visible when the system is running in Auto Mode.





Setup Video 6 Prog. Heating Schedule Part 2

13

To cancel Manual
Override, tap



This will return the
set temperature to
that of the active
heating level.

